

## 3.22 DMX CONTROL

| MODE<br>10 Ch        | FUNCTION  | DMX<br>Value           |
|----------------------|---|------------------------|
| 1                    | <b>DIMMER</b><br>0~100%                             | 000 - 255              |
| 2                    | <b>RED</b><br>0~100%                                | 000 - 255              |
| 3                    | <b>GREEN</b><br>0~100%                              | 000 - 255              |
| 4                    | <b>BLUE</b><br>0~100%                               | 000 - 255              |
| 5                    | <b>WHITE</b><br>0~100%                              | 000 - 255              |
| 6                    | <b>COLOR COLOR + COLOR TEMPERATURE</b>              |                        |
|                      | No Function   | 000-010                |
|                      | R 100% G 0~100% B 0                                 | 011-030                |
|                      | R 100%~0 G 100% B 0                                 | 031-050                |
|                      | R 0 G 100% B 0~100%                                 | 051-070                |
|                      | R 0 G 100%~0 B 100%                                 | 071-090                |
|                      | R 0~100% G 0 B 100%                                 | 091-110                |
|                      | R 100% G 0 B 100%~0                                 | 111-130                |
|                      | R 100% G 0~100% B 0~100%                            | 131-150                |
|                      | R 100%~0 G 100%~0 B 100%                            | 151-170                |
|                      | R 100% G 100% B 100% W 100%                         | 171-200                |
|                      | Color temperature 1                                 | 201-205                |
|                      | Color temperature 2                                 | 206-210                |
|                      | Color temperature 3                                 | 211-215                |
|                      | Color temperature 4                                 | 216-220                |
| Color temperature 5  | 221-225   |                        |
| Color temperature 6  | 226-230   |                        |
| Color temperature 7  | 231-235   |                        |
| Color temperature 8  | 236-240   |                        |
| Color temperature 9  | 241-245   |                        |
| Color temperature 10 | 246-250   |                        |
| Color temperature 11 | 251-255   |                        |
| 7                    | <b>STROBE</b><br>No Function<br>Strobe slow to fast | 000 - 010<br>011 - 255 |
| 8                    | <b>AUTO/SOUND PROGRAMS</b>                          |                        |
|                      | No Function   | 000-010                |
|                      | Auto Program 1                                      | 011-060                |
|                      | Auto Program 2                                      | 061-120                |
|                      | Auto Program 3                                      | 121 - 180              |
| Auto Program 4       | 181 - 240   |                        |

| MODE<br>10 Ch                     | FUNCTION                                | DMX<br>Value |
|-----------------------------------|---|--------------|
| 8                                 | Sound show                              | 241 - 255    |
| 9                                 | <b>AUTO SPEED</b><br>Speed slow to fast | 000 - 255    |
| 10                                | <b>DIM MODE</b>                         |              |
|                                   | Preset dimmer speed from display menu   | 000-051      |
|                                   | Dimmer speed mode off                   | 052-101      |
|                                   | Dimmer speed mode1 (fast speed)         | 102-152      |
| Dimmer speed mode2 (middle speed) | 153-203                                 |              |
| Dimmer speed mode3 (slow speed)   | 204-255                                 |              |

| MODE<br>4 Ch | FUNCTION               | DMX<br>Value |
|--------------|------------------------|--------------|
| 1            | <b>RED</b><br>0~100%   | 000 - 255    |
| 2            | <b>GREEN</b><br>0~100% | 000 - 255    |
| 3            | <b>BLUE</b><br>0~100%  | 000 - 255    |
| 4            | <b>WHITE</b><br>0~100% | 000 - 255    |

| MODE<br>6 Ch | FUNCTION  | DMX<br>Value           |
|--------------|---|------------------------|
| 1            | <b>DIMMER</b><br>0~100%                             | 000 - 255              |
| 2            | <b>RED</b><br>0~100%                                | 000 - 255              |
| 3            | <b>GREEN</b><br>0~100%                              | 000 - 255              |
| 4            | <b>BLUE</b><br>0~100%                               | 000 - 255              |
| 5            | <b>WHITE</b><br>0~100%                              | 000 - 255              |
| 6            | <b>STROBE</b><br>No Function<br>Strobe slow to fast | 000 - 010<br>011 - 255 |