


2005-09-30

Lino Manfrotto + co., Spa

ART.
143

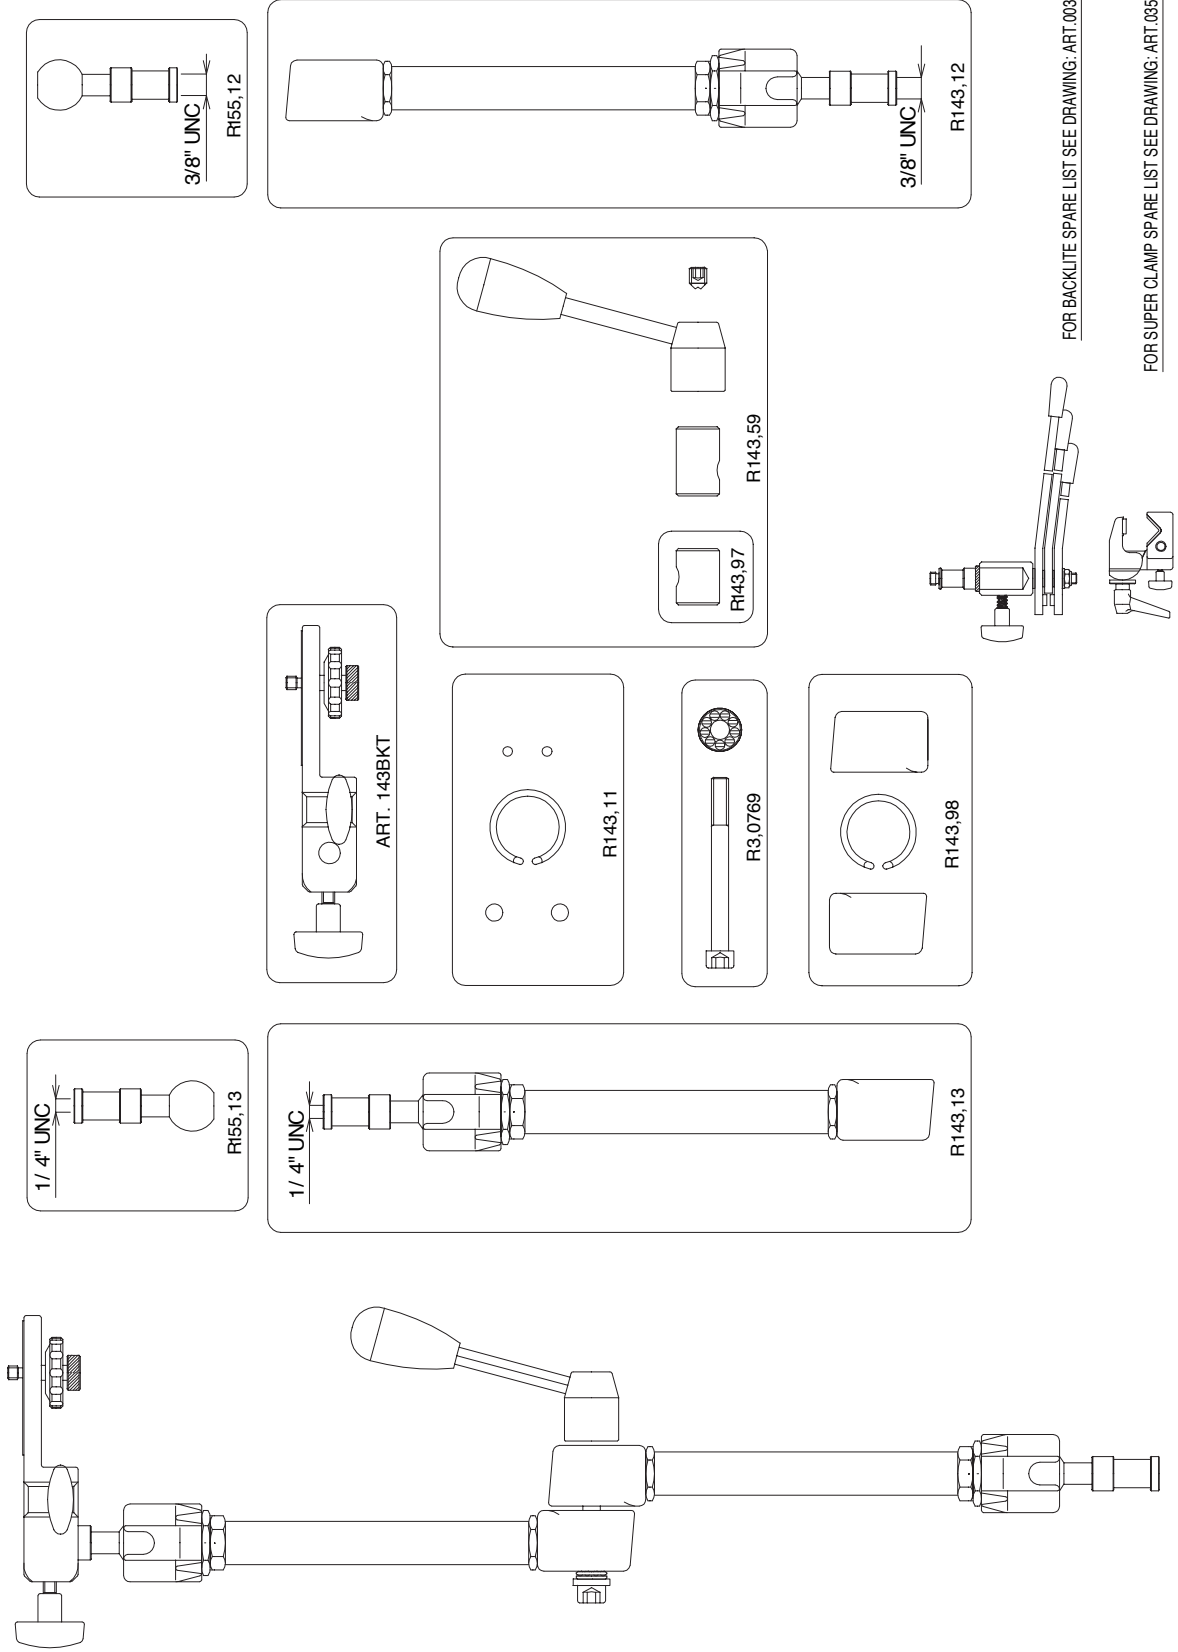

User Manual



① Monitor quick release adaptor
 ② Knob
 ③ 3/8" thread

Tighten in the direction of the arrow

➡

Manual

① Loosen the knob to adjust the angle

0°-360°

⏪

② Mount the end with 3/8" thread to the camera kit adaptor. It will be better to tighten it with a wrench.

Camera kit adaptor

③ Release the QR Plates by pushing the button found at the side of the QR Base

QR Plate

QR Base

➡

④ Using the 1/4" Screw Driver, install the Plates to Monitor or any devices that has 1/4" thread.

⑤ Install the QR Base onto the Magic Arm.

⏪

⑥ Insert the QR Plate into the base

⑦ release by pushing the security button located at the side of the QR Base to release the monitor

➡

⑧ The magic arm comes with friction design. The magic arm will keep its angle when you loosen the knob a little bit. Then you can readjust the angle of the two arms.

Loosen a little bit

⏪